



\*Add 8.0in [203.2mm] for EC8 raised column option

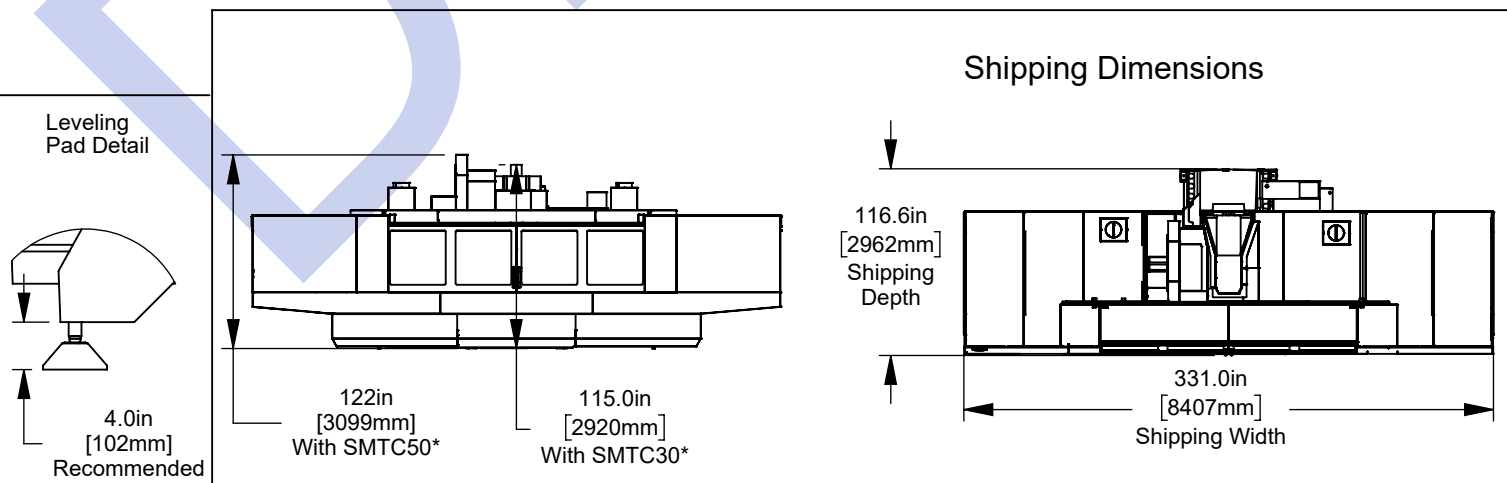

Air & Power

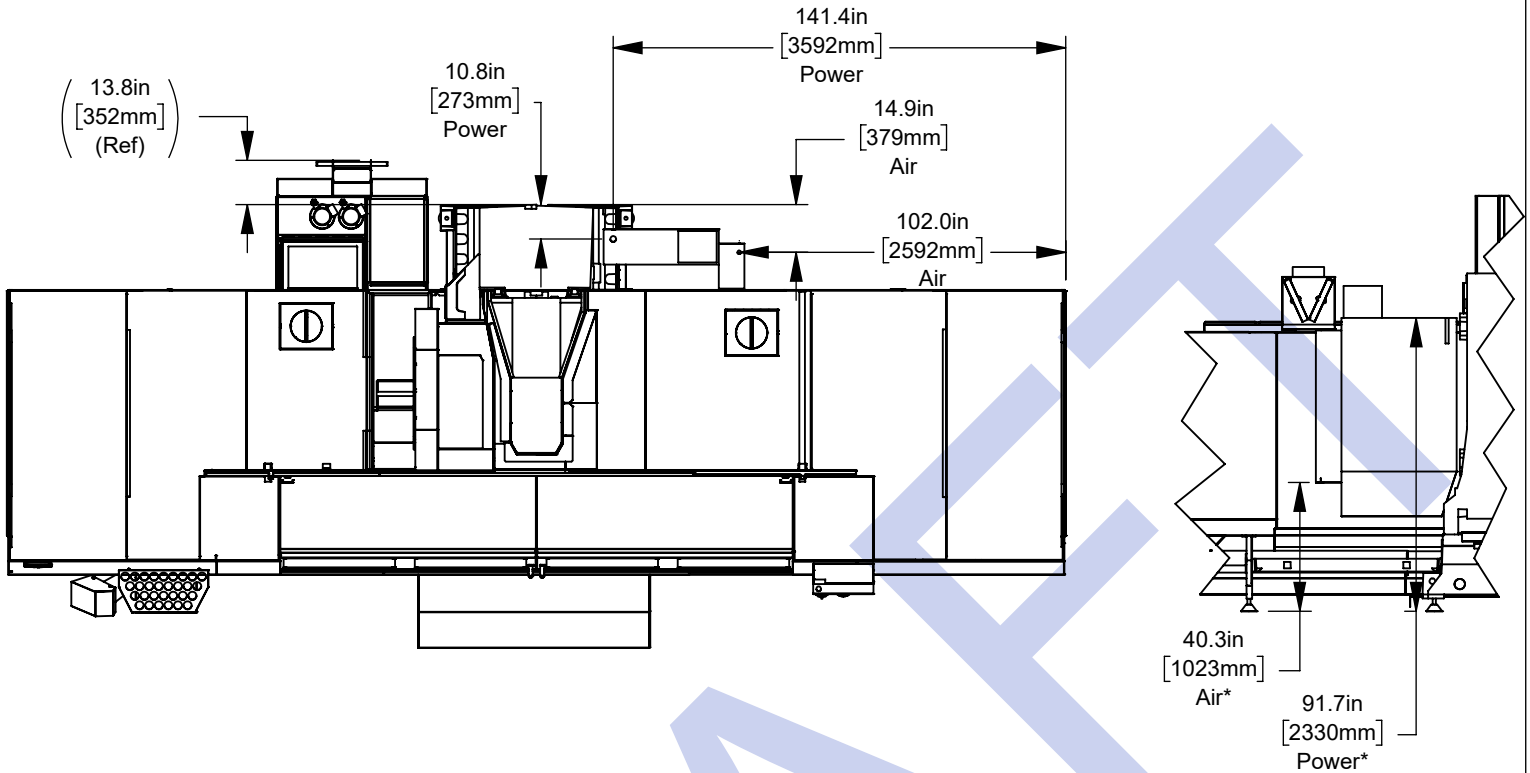


\*Add 8.0in [203.2mm] for EC8 raised column option

**Anchor Detail**

Ø .625in [16mm]  
 ▽ 3.5in [89mm]


Anchor Pattern

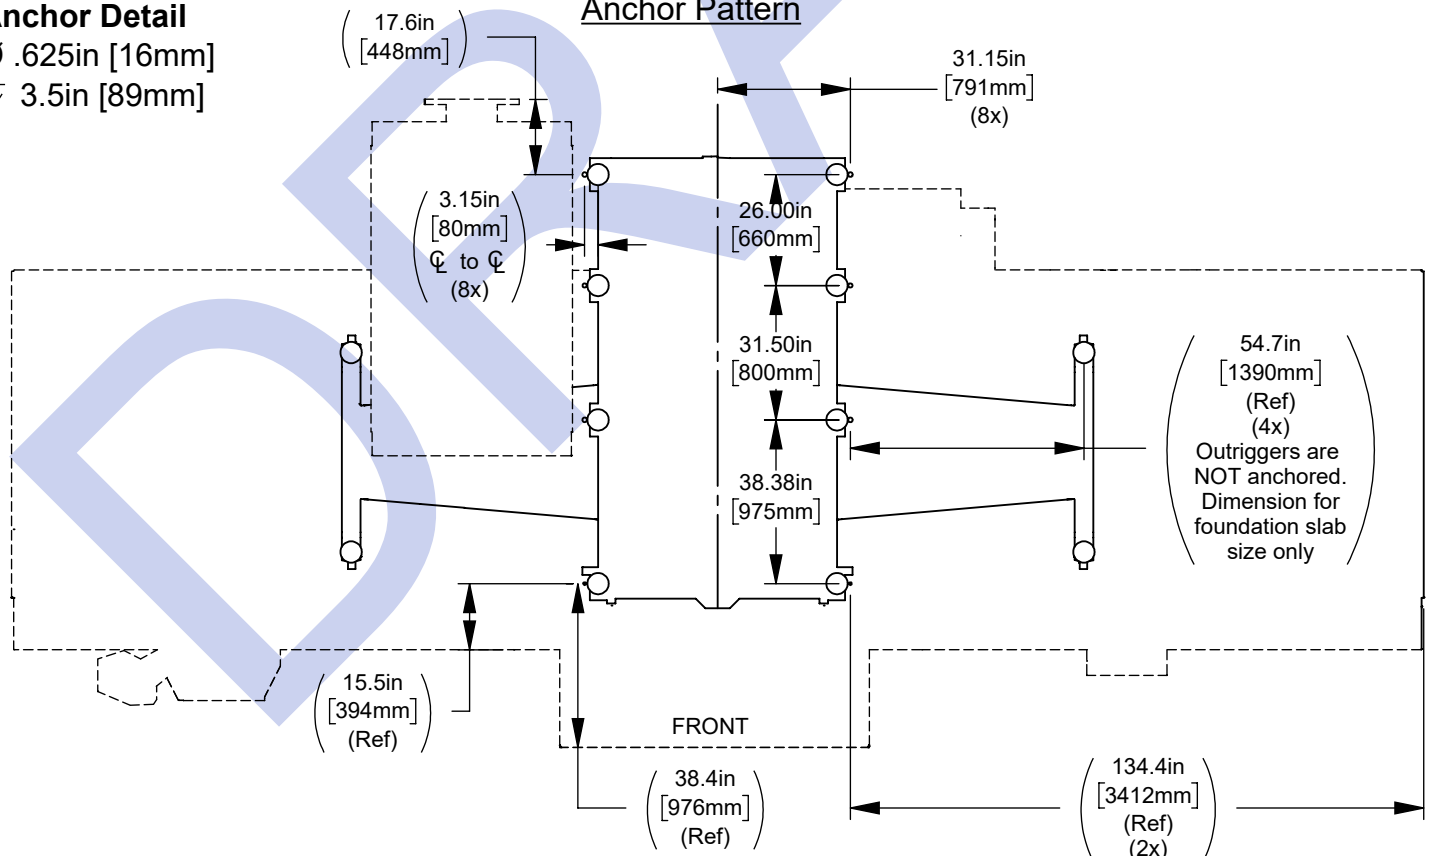

Note - Machine must be placed on one continuous slab.  
 Slab to extend 12" [305mm] beyond all leveling feet


Anchor Patter for Cast/Hammer-In anchors with 3.15" [80mm] Leveling pad center to anchor bore hole center distance

Height Breakdown

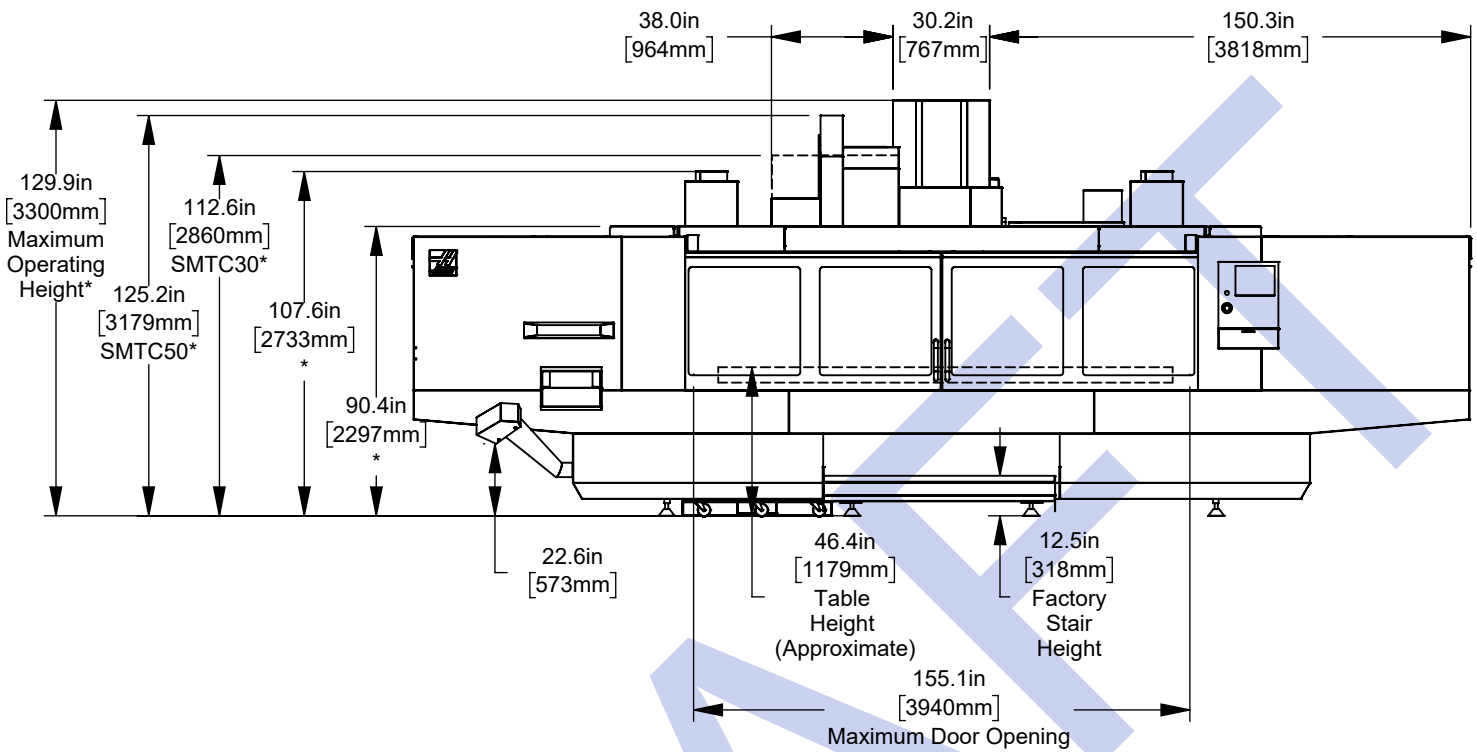


\*Add 8.0in [203.2mm] for EC8 raised column option

Width Breakdown

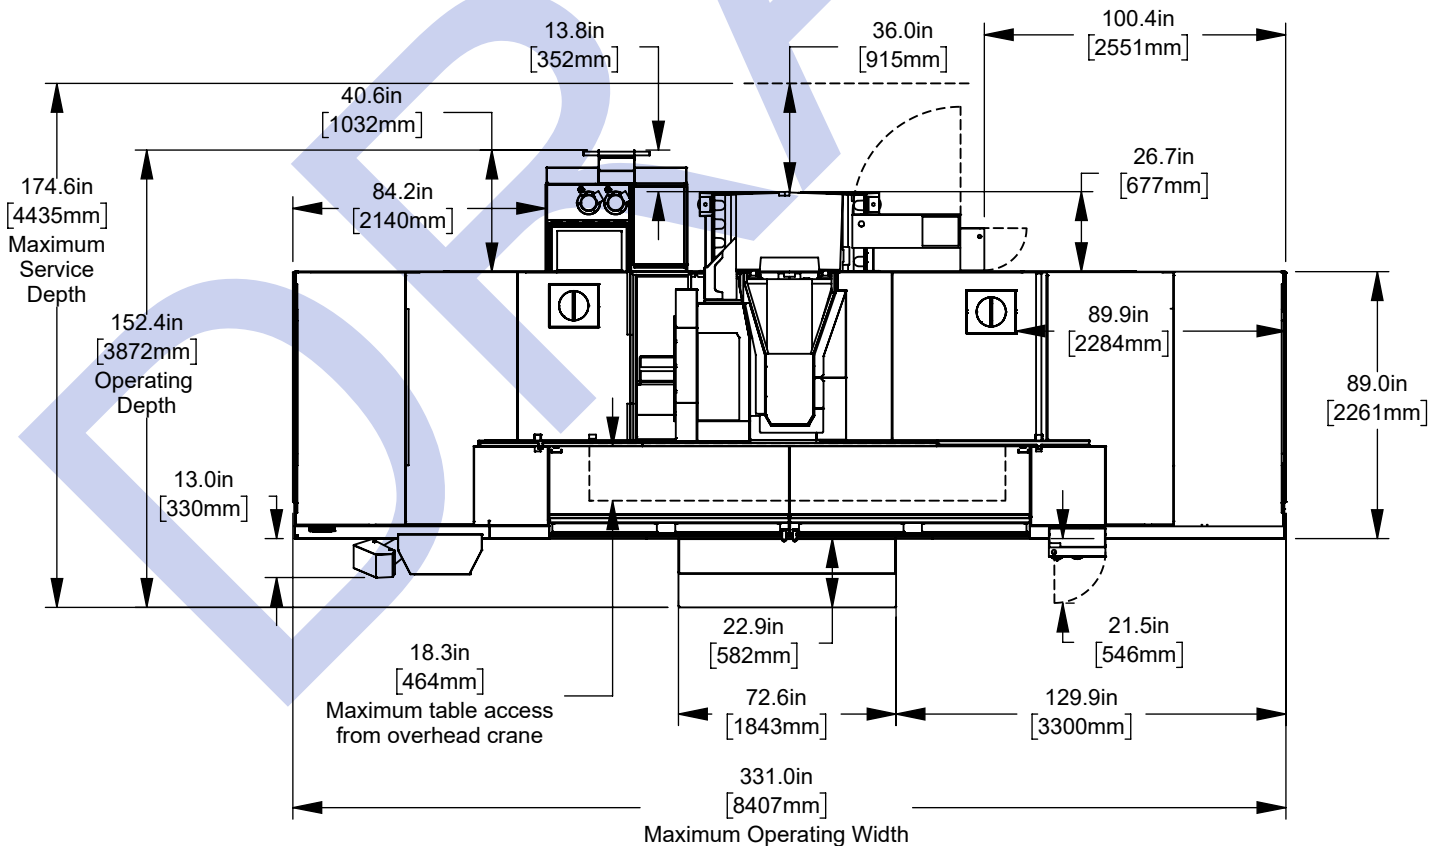


Maintain 3 feet [915mm] clearance to the nearest obstruction 3 around all sides of machine perimeter for maintenance access


X & Y-Axis Travel

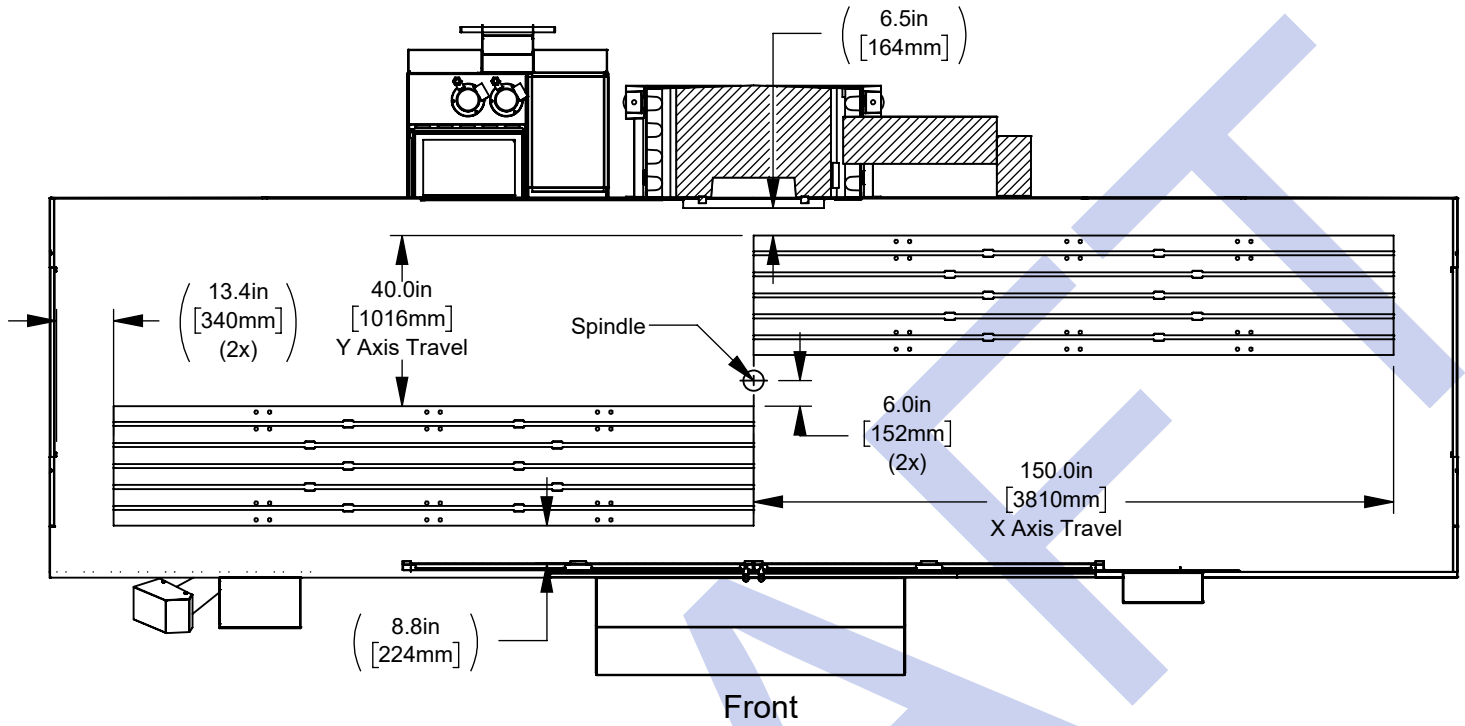

Z-Axis Travel

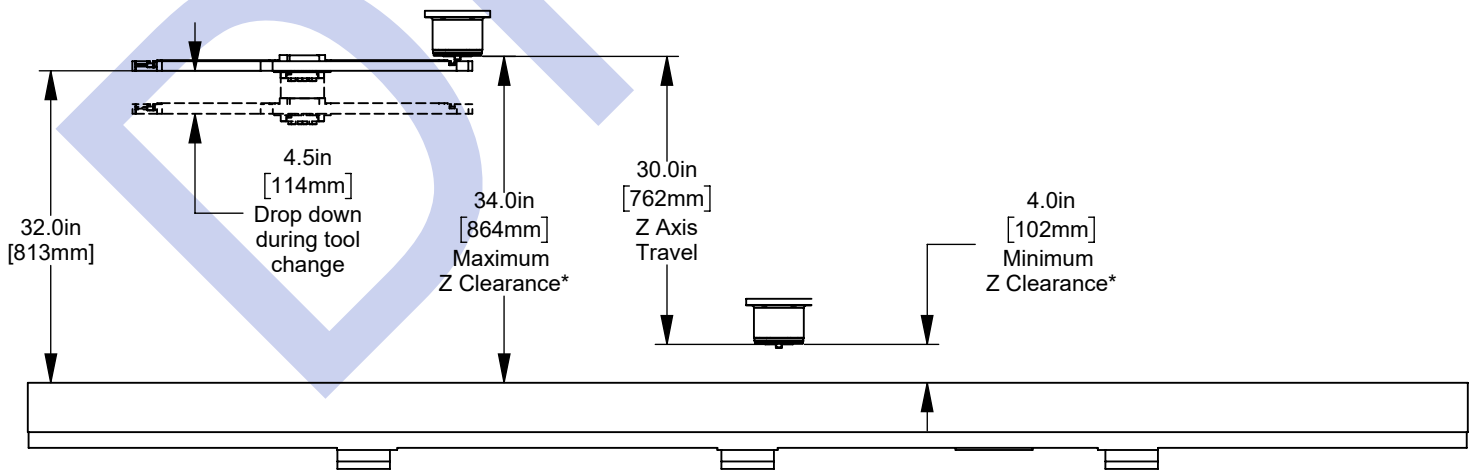

\*Add 8.0in [203.2mm] clearance for EC8 raised column option

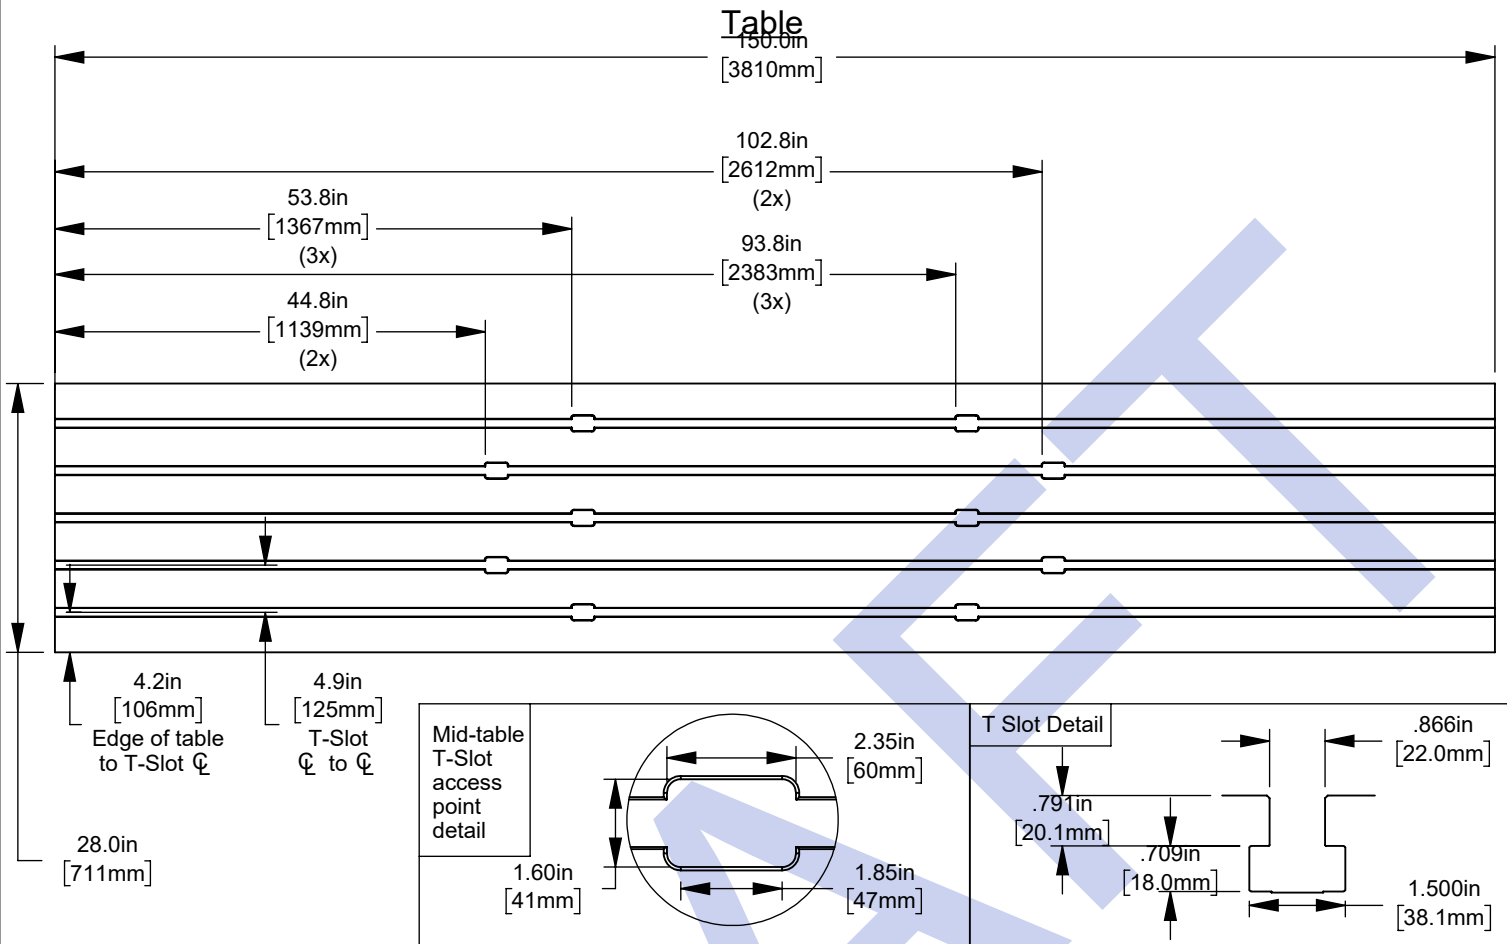

### Tool Changer

